

Installation



DD WOOD
ไม้บัวดีดงู

corner cornice

Caution: Avoid solvents base as thinner. Cause wood pattern may be damaged.



1 Measure the length of pillar width as shown as the picture.



2 Cut off the corner cornice that we mark from the 1st method.



3 Measure the length of inner corner pillar.




4 Place the cornice before put the power nail glue.



5 Put the hot glue behind the cornice on the connecting point.



6 Put the power nail glue.

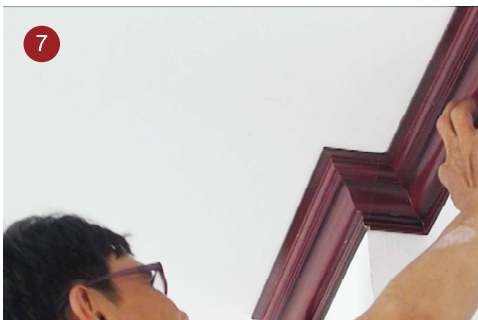

7 Put the power nail gun instead of supporting the cornice on 3-5 minutes.



8 If we see the connecting point as shown as the picture, we can use the acrylic sealant for the connecting point.



9 After the acrylic sealant is dry, we use the acrylic color to decorate as shown as the picture.