


# Installation



DD WOOD  
ไม้บัวดีดงู

## Middle Cornice

Caution: Avoid solvents base as thinner. Cause wood pattern may be damaged.

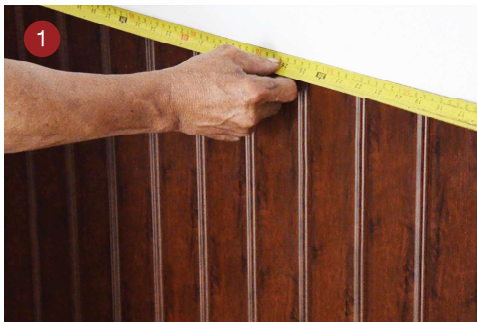


1  
Measure the area that needs to be installed.



2  
Cut according to the measured size



3  
Put glue in the wave pattern.

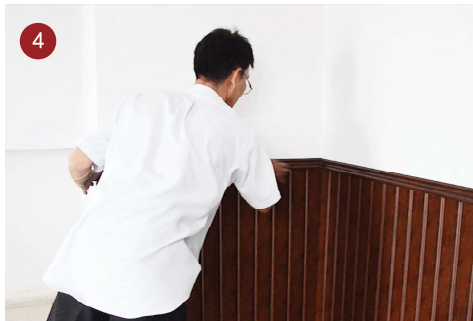

4  
Install on the wall.